

Model IPGTS Goal Tender™ Operation Manual



- Order IPGTS9 Transmitter For Operation of up to 9 Devices
- Order IPGTS27 Transmitter For Operation of up to 27 Devices
- Order ONE IPGTS1 Receiver for Each Device to be Operated
- Order ONE IPGTSA to Add a Saf-Alarm to Each Device to be Operated

Each electric hoist has a number that corresponds to each gym component. The factory setting for the receivers are the numbers shown on the control box lid. Hence, 1-9 or A1-A9, B1-B9, C1-C9.

To raise or lower the gym equipment select the equipment number (1-9, A1-A9, B1-B9, C1-C9) and press the UP or DOWN button.

Goal Tender™ Programming Procedure

Each receiver is capable of storing two (2) transmitter codes for multiple operations. One (1) code is preset at the factory. To change the factory setting or add a second code, follow the steps below.

Step 1:

Momentarily press and release the Learn button on the receiver. The LED will turn on. You will approximately 20 seconds to complete step 2.

Step 2:

Set the Goal Tender transmitter (IPGT9 or IPGT27) to the desired setting. Press and hold the UP or DOWN button on the Goal Tender transmitter until the LED on the receiver goes off or the electric hoist begins to run.

Step 3:

Repeat for additional transmitter codes.

Erasing the IPGTS Receiver's Memory

If it is necessary to erase all of the codes stored in the receiver's memory, press and HOLD the Learn button on the receiver until the LED goes off.

Operational Check

- If IPGTS transmitter doesn't activate equipment. Unit number entered must exactly match the receiver number.
- Metal and some types of construction may affect reception. If this happens, stand directly in front of equipment you are operating.
- If system still does not work try erasing receiver's memory and re-enter codes.

Warnings

- **Only authorized and qualified personnel should operate this equipment.**
- **The operator should stand at one location in full view of the unit during the folding operation.**
- **Before raising or lowering gymnasium equipment make sure area is clear of people. DO NOT allow anyone to enter areas until the equipment is in full raised or lowered position and all motion stopped.**
- **Allow gymnasium equipment to come to a COMPLETE STOP before reversing direction. DO NOT reverse direction more than four times per minute.**

Warranty

IPI by BISON warrants their equipment to be free from all defects in workmanship for one year for the date of final completion of product installation.

This warranty does not cover misuse of equipment, vandalism, or normal wear and tear. All replacement parts must be obtained from or approved by IPI by BISON. Failure to review the replacement part requirements with IPI by BISON will void the warranty.



603 "L" Street, Lincoln, NE 68508
800-637-7968 Fax: 800-638-0698
www.IPIbyBison.com